

K2-INDICATOR CONFIGURATION PARAMETERS

Enter the configuration mode

Switch on the instrument with the  key pressed continuously during the initial countdown.

LF1 will appear, with the key  select **LF2** (scale configuration menu) and press the key  to enter the menu.

1. The internal device accounts will be displayed. E.g. 127889
2. Press the key 
3. It will be displayed

1 0 0 0 0 1
A B C D E F

This menu should only be changed for special configurations.

4. Press  to continue.
Select the maximum capacity of the equipment, taking into account the decimal points. E.g : for 1500 kg - 500g

015000 (the last zero is for decimal point 1500.0)

(Use  to move and  to modify a value.

5. Press  to continue
6. Select the decimal point. (E.g for 1500 kg - 500g)

Dp 0.0

(Press  to select the option wanted.

7. Press  to continue
8. Seleccionar las divisiones. EJ para 1500 kg -500g

Diu 05

9. Press  to continue
10. **LF1** will appear – Calibration menu
11. Press  to continue and enter the calibration menu

12. **CAL 2** will appear – Zero calibration

13. Press  to continue

14. The calibration weight will appear E.g : **1500.0**

(Use  to move and  to modify a value.

Once the calibration weight is selected,

Example: 500k – **500.0**

15. Press  to continue

16. The display will start flashing. Place the calibration weight on the scale.

17. Press  to continue

18. If everything went well, the weight will remain fixed. Calibration is complete.