


## QUICK CONFIGURATION GUIDE

### Connection

Connect the “Z printer Cable” (Ref. 36784) to the weight indicator and to the printer.

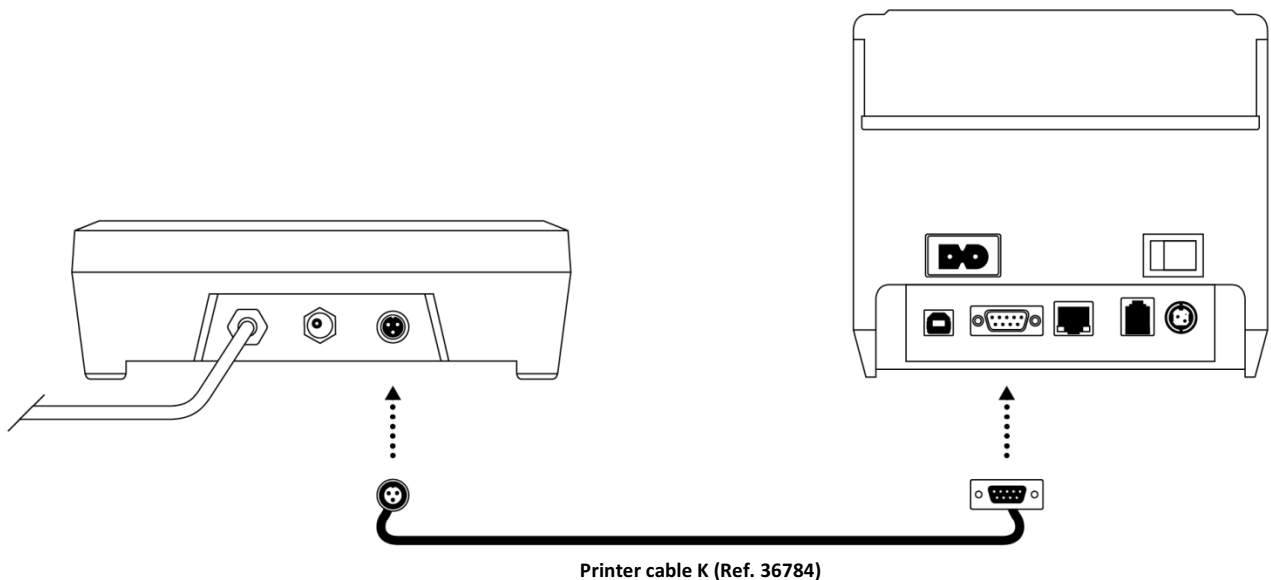

### Step 1: Configure the Z3 weight indicator for use with the PR6 printer

The Z3 indicator is factory-configured for using a PR4 model printer. To obtain full performance from your **PR6 printer**, you need to first change this configuration before its use, following the indications contained in this document. Once this procedure has been completed, the configuration is registered in the unit's non-volatile memory and it will not be necessary to repeat it.

1. Press key **[M/BG]** to access the configuration options menu.
2. Press key **→** to move to the **r5232** menu option.
3. Press key **↵** to validate. The visor will display the **bAudr** option.
4. Press key **→** repeatedly to move forward to the **F0rñ** option and press key **↵** to access this submenu of options.
5. Press key **→** repeatedly to move forward to the **PR6** option and press key **↵** to validate.
6. The visor will display the **SAVE** message, indicating that the selected option has been saved to the indicator's non-volatile memory.
7. Press the **ESC** key repeatedly to exit the configuration options menu and return to normal operating mode (weight indicator).

Download the full manual from the following link:

[http://gram-group.com/wp-content/uploads/2016/12/MANUAL\\_Z3\\_2016\\_ENG\\_001.pdf](http://gram-group.com/wp-content/uploads/2016/12/MANUAL_Z3_2016_ENG_001.pdf)

