



RedMax - Revolution

Electrical, explosion proof rotary actuators - size M

On-off / 3-pos , 24..230 VAC/DC, 95° angle of rotation incl. 5° pretention

50/75 Nm - 100 Nm without and 30 Nm - 50 Nm with safety operation (spring return)

PTB-tested in acc. with RL 94/9/EG for zone 2 and 22.

RedMax - 50.75
RedMax -100
RedMax - 30 - F
RedMax - 50 - F
RedMax - ... - S/SF
RedMax - ... - VA/CT

Subject to change

Compact - Easy installation - Universal - Cost effective - Safe

Type	Torque	Supply	Motor running time	Spring return	Control mode	Feedback	Wiring diagram
RedMax -50.75	50 Nm & 75 Nm	24..230VAC/DC	40/60/90/120/150 sec. at 90°	without	On-off, 3-pos	-	SB 1.0
RedMax-100	100 Nm	24..230VAC/DC	40/60/90/120/150 sec. at 90°	without	On-off, 3-pos	-	SB 1.0
RedMax- 30 - F	30 Nm	24..230VAC/DC	40/60/90/120/150 sec. at 90°	20 sec. at 90°	On-off, 3-pos	-	SB 1.1
RedMax- 50 - F	50 Nm	24..230VAC/DC	40/60/90/120/150 sec. at 90°	20 sec. at 90°	On-off, 3-pos	-	SB 1.1
RedMax- ... - S/SF	Type as above but with 2 integral, potential free aux. switches, switching at 5° and 85° angle of rotation, 2 xEPU, max.24V/3A, 230V/0,25A						SB 3.6
RedMax- ... - VA	Type as above but with stainless steel housing (AISI 316) gearbox parts in stainless steel, cable gland and hollow rivet nickel-plated						
RedMax- ... - CT	Type as above but with AL - housing and amercoat paint, gearbox parts, cable gland and hollow rivet nickel-plated						

Application


Damper



Ball valve



Throttle valve



Description size M

The new RedMax actuators are a revolution for safety and shut-off dampers, VAV systems, ball valves, throttle valves and other motorized applications for HVAC systems, in chemical, pharmaceutical, industrial and Offshore-/Onshore plants, for use in EEx-areas zone 2 (gas) and zone 22 (dust).

Highest protection class (ATEX) and IP 65 protection, small dimensions, only 9,5 kg weight, universal functions and technical data, an integrated heater and an optional stainless steel housing guarantee safe operation even under difficult environmental conditions. High quality brushless motors guarantee long life.

All actuators are programmable and adjustable on site. Special tools or equipment are not required. Motor running times and torques - according to the actuator type - selectable or adjustable on site. The integrated universal power supply is self adaptable to input voltages in the range of 24 to 230 VAC / DC.

The actuators are 100% overload protected.

RedMax-...-F actuators are equipped with spring return failsafe function. Standard shaft connection is a double squared direct coupling with 16 x 16 mm.

Different accessories are available to adapt aux. switches, terminal boxes or adaptations for ball valves and throttle valves.

Highlights

- ▶ For all type of gas, mixtures, vapours and dust for use in zone 2 and 22
- ▶ Universal supply unit from 24 to 230 V - AC/DC
- ▶ 5 different motor running times (40-60-90-120-150 sec./90°), adjustable on site
- ▶ spring return running time (20 sec./90°)
- ▶ On-off and 3-pos control with or without spring return function
- ▶ 30 - 50 - 75 - 100 Nm actuators in the same size (M)
- ▶ 100 % overload protected
- ▶ Compact design and small dimension (l x w x h = 286 x 150 x 116 mm)
- ▶ Direct coupling to the damper shaft with double-squared connection 16 x 16 mm
- ▶ 95° angle of rotation incl. 5° pre-tention
- ▶ Robust aluminium housing (optional stainless steel or amercoat painting)
- ▶ IP 65 protection
- ▶ Simple manual override include + preparation for comfortable manual override
- ▶ Gear made of stainless steel and sinter metal
- ▶ Only 9,5 Kg weight
- ▶ Integral heater for ambient temperatures down to -40°C
- ▶ Integral safety temperature sensor
- ▶ Integral equipment for manual adjustment (push button, lamp, switch)
- ▶ Preparation for adaptable aux. switches type RedSwitch
- ▶ Range of accessories

[illegible]

Explosion proof	RedMax actuators - size M
Certification	PTB 04 ATEX 2106
ATEX	Directive 94/9/EG (ATEX)
Approval for gas	II3G EEx nC II T6 II3(1)G EEx [ia] IIC gas, mist, vapour, zone 2
Approval for dust	II3D IP66 T80°C dust, zone 22
Identification	CE Nr. 0158
EMC	EMC-directive 89/336/EG
Low voltage	Low-voltage directive 73/23/EG
IP-Protection	IP 65
Potential compensation	external PA-terminal. 4 mm ²


Accessories or special solutions - size M	
RedMax-...-S	2 internal, potential free aux. switches at 5°/85°, 24V/3A, 230V/0,25A, SB 3.6
RedMax-...-VA	above listed types in stainless steel version, housing AISI 316.
RedMax-...-CT	above listed types in Al box and amercoat painted
RedBox-...	Terminal boxes for zone 2, 22.
MKK-M	mounting bracket for Terminal boxes type RedBox-... direct on actuator
RedSwitch	2 external aux. switches, 2 x EPU, adjustable, for zone 2, 22
HV-M	comfortable manual override for RedMax actuators size M
Adaptations	various adaptations for dampers/valves on request



Electrical connection

RedMax actuators are equipped with a universal supply unit working at a voltage range from 24 to 230 VAC/DC. The supply unit is self adjustable to the connected voltage! The safety operation of the spring return function works if the supply voltage is cut. For electrical connection inside hazardous areas an terminal box, certificated in acc. with ATEX is required (e.g. RedBox).

Wiring diagram RedMax-50.75 and RedMax-100

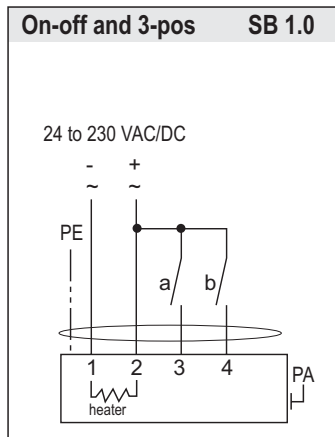

Attention!

If 40 sec. or 60 sec. mode is selected, the self adjustment of angle of rotation must be started.


Parameter, Adjustment - Failure indication

Switch - Push button - Lamp for adjustment, behind the blanking plug

10-position switch (S)

Push button (T)

3-colour LED

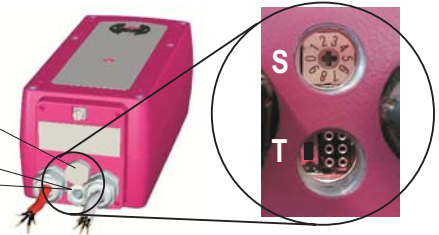

Parameter selection

Example: RedMax-50.75

Requested parameter:

Torque 75 Nm

Running time motor 90 sec/90°

Type	Torques	
RedMax- 50.75	50 Nm	75 Nm
RedMax- 100	100 Nm	
RedMax- 30-F	30 Nm	
RedMax- 50-F	50 Nm	
Running times	Position of switch S	
40 sec./90°	00	05
60 sec./90°	01	06
90 sec./90°	02	07
120 sec./90°	03	08
150 sec./90°	04	09

Result: switch position (S) 07

Function, adjustment and parameter

A) Self adjustment of angle of rotation:

Switch (S) into position 02 (low torque) or 07 (high torque), then push button (T) for minimum 3 seconds. The actuator will drive into both end positions to be adjusted. LED indicates green.

Adjustment time needs approx. 180 sec. (90 sec. On, 90 sec. Off). After that, switch S into position 00-09 in acc. with the required torque and running time.

B) Selection of running time and torque:

Put switch (S) into the correct/selected position in acc. to above table.

The selected parameter will work at next operation of the actuator.

Adjustment can be done even without supply voltage. If supply voltage is available turn switch only if actuator is not running.

D) Additional information for 3-pos operation:

a closed, b open = direction I

b closed, a open = direction II


a and b closed = Motor doesn't work

a and b opened = Motor doesn't work

Direction (I and II) depends on left/right mounting of the actuator to the damper/valve.

You can change direction of the motor by changing electrical wiring terminal 3 and 4.


Wiring diagram RedMax-30-F and RedMax-50-F (with spring return)

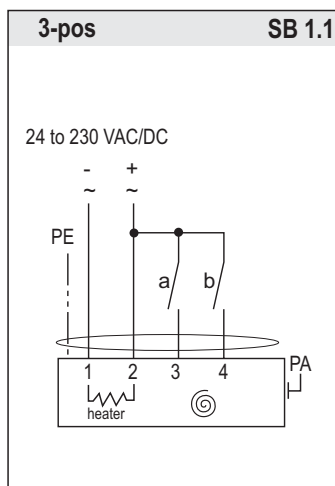

Attention!

If 40 sec. or 60 sec. mode is selected for motor and/or spring return, the self adjustment of angle of rotation must be started. Never use actuators in this mode without external torque/force.

Wiring diagram type ExMax-...-M with integral aux. switches

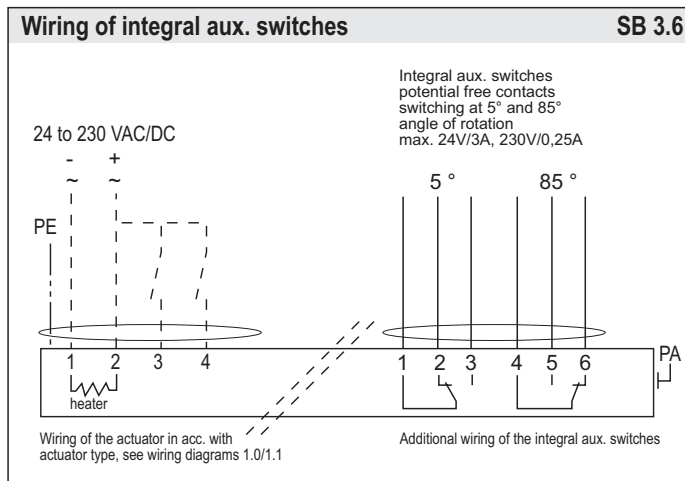

Error indication

See extra information "EL-M "



RedMax-50.75 RedMax-100

RedMax-30-F

RedMax-50-F

Special makes

RedMax-...S/SF

RedMax-...VA/-CT

SCHISCHEK
EXPLOSION PROOF**Mounting instructions and important information for operation and installation****Important information for installation and operation****A. Installation, commissioning, maintenance**

The cable of the actuator must be installed in a fixed position and protected against mechanical and thermal damage. In acc. with operation RedMax actuators are maintenance free. Nevertheless maintenance must comply with regional standards, rules and regulations. The actuators must not be opened by the customer. For outdoor installation a protective housing against rain, snow and sun should be applied to the actuator, as well as a constant supply at terminal 1 and 2 for the integral heater. For electrical connection inside hazardous areas a terminal box is requested (e.g. type RedBox).

Attention: If the actuator is put out of operation all EEx-rules and regulation must be applied.

Example: you have to cut the supply voltage before opening an EEx-e terminal box

B. Shaft connection, selection of running time, heater

ExMax actuators are equipped with a direct coupling double squared shaft connection of 16 x 16 mm. The housing of the actuator is axially symmetrically built to select open/close direction of the spring return function by left/right mounting. In acc. to the actuator type 5 different motor running times can be selected on site. The integral heater is for ambient temperatures down to -40°C.

C. 3-pos control mode

See extra information "EL-M".

D. Spring return

Spring return function works if the supply voltage (terminal 1 or 2) is cut. In the event of an electrical interruption, the spring returns to its end position.

E. Operation at an ambient temperature below - 20°C

See extra information "EL-M".

F. Excess temperature

In acc. to the ATEX rules and regulations EEx actuators must be protected against excess temperature. An internal thermostat guarantees the temperature class in the event of failure. If this thermostat is working the actuator must be sent to the factory. RedMax actuators are equipped with an additional temperature sensor to stop the actuator before reaching this max. temperature. In this case the failure must be eliminated immediately on site.

G. Loss of voltage

In switch position 0, 1 and 5, 6 (motor running time 40, 60 sec.) and after voltage interrupts moves the actuator (type 50.75 and 100 /-S) in OFF position then the actuators works regarding control signal.

Mounting on air dampers with double squared shaft connection

Details see extra information "ME-M":

Mounting of quarter turn valves

Details see extra information "ME-M":

RedSwitch - adaptable external aux. switches

RedSwitch is an accessory to RedMax actuators size S, fixing directly onto the actuator. RedSwitch are aux. switches with 2 potential free contacts, adjustable on site. The electrical wiring needs a terminal box.

RedBox - adaptable terminal box

For electrical connection of a RedMax inside the hazardous area a terminal box is required.

RedBox-3P for RedMax-50.75,...-100, ...-30-F, ...-50-F

RedBox-Y/S for RedMax-...-S integral aux. switches

To adapt the RedBox direct to the actuator housing an additional accessory type **MKK-M** is required.

Extra information "EL-M" (see additional data sheet)

extra technical information, versions of circuit diagrams and failure indication

Extra information "ME-M" (see additional data sheet)

extra technical information, dimensions, installation instruction and illustration

D.RM-01.01-M-en-3P
2005-12-02

Schischek GmbH Germany D-90579 Langenzenn, Mühlsteig 45, Gewerbegebiet V, Tel. ++49 (0)9101-90810, Fax ++49 (0)9101-908177, Email ExMax@schischek.de

www.schischek.com



ExMax/RedMax - extra information EL-M



The "EL"-data sheet contains additional information for ExMax and RedMax actuators of the size "M", for the optimization and simplification in regard to planning, installation and initial startup. It provides influences of external factors in reference to the safe initiation of the actuators, as well as technical references and problem solutions (error indication). With the error indication, functions can be examined and different error/problems can be adjusted locally.

For additional mechanical data have a look at "extra information ME-M"

- Power supply design
- Design of line cross section 24...48 VAC/DC
- Wiring alternatives for on-off, 3-pos, BF actuators
- Wiring alternatives for modulating actuators
- Use at ambient temperatures down to -20°C / - 40°C ()
- Error indication - problem treatment/solution

Power input depending of supply voltage

Power supply design

The design of the on-site supply, depends on the selected motor running time and selected supply voltage. Accompanying values are "about values", since there can be construction unit dispersions within electronics. The power consumption in the blocking position is run time independently with max. 20 W. The power consumption for the heater is between 5 and 12 W. The heading is running only if the motor is in idle position! The initial starting supply voltage required by the actuators power supply unit is around 2,0 A for about 1 Sec. (Please consider this while conceiving the cross section of the supply line)

		Rated current in acc. with motor running time				
Voltage	Current	40s	60s	90s	120s	150s
230 V	I _{rated}	0,3 A	0,3 A	0,15 A	0,10 A	0,10 A
24 V	I _{rated}	1,0 A	0,7 A	0,5 A	0,4 A	0,4 A

		Rated current in acc. with motor running time (Spring return)				
Voltage	Current	40s	60s	90s	120s	150s
230 V	I _{rated}	0,4 A	0,3 A	0,15 A	0,10 A	0,10 A
24 V	I _{rated}	2,0 A	1,8 A	1,4 A	1,4 A	1,4 A

Dimensioning of the line cross section with 24 ...48 VAC/DC supply voltages

Dimensioning/Design of the supply line

On long distances between voltage supply and drive, voltage drops occur due to line resistances. As a consequence with 24 VAC/DC the actuator receives a too low tension and does not start. In order to prevent this, the cross section of the inlet line is to be designed/dimensioned accordingly. The accompanying formula allows the calculation of the necessary line cross section, perhaps provides the maximally permitted conduit length utilizing the existing line cross section. Alternatively the secondary voltage can be increased by selecting a transformer. For calculation purposes, following characteristics are essential:

U_v = supply voltage in [V]

A = line cross section in [mm²]

L = conduit length in [m]

Factor 0.0714 = drive-specific factor

[Vmm²/m] (based on the electrical conductivity of electrolytic copper with a coefficient of 56m/Wmm²)

Diagram showing the connection from a **panel** (voltage "U_v" [V]) through a cable of **length "L" [m]** and **line cross section "A" [mm²]** to a **terminal box** and then to the **actuator**.

Formula for max. cable length "L" at cable cross section "A"


$$L = A \cdot (U_v - 18V) : 0,0714$$

Example: A = 1,5 mm², U_v = 24 V
Length of cable L = 126 m

Formula of needed cable cross section "A" at a cable length of "L"

$$A = 0,0714 \cdot L : (U_v - 18V)$$

Example: L = 250 m, U_v = 30 V
Cross section of A = 1,5 mm²

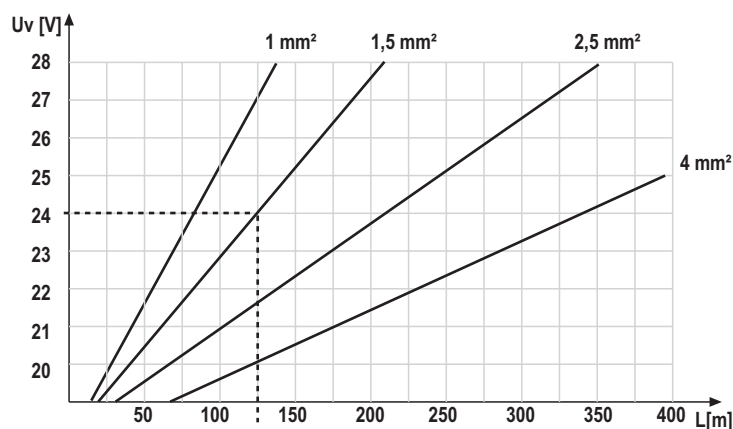

Example:

24 V power supply with wire diameter 1,5 mm² = 126 m




Wiring alternatives for on-off and 3-pos actuators with spring return

ExMax...-F, ExMax...-SF, RedMax...-F, RedMax...-SF


On-off and 3-pos SB 1.0

24 to 230 VAC/DC

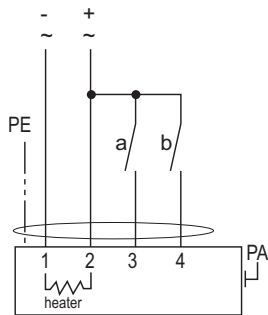

On-off 1-wire SB 1.1

24 to 230 VAC/DC

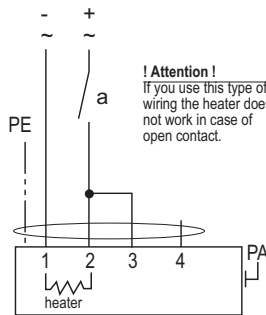

! Attention !
If you use this type of wiring the heater does not work in case of open contact.



If 40 sec. or 60 sec. mode is selected for motor and/or spring return, the self adjustment of angle of rotation must be started.


Never use actuators without external torque/force min. 10 Nm.

Wiring alternatives for BF actuators

ExMax...-BF, RedMax...-BF

On-off 1-wire - spring return + EEx-i circuit SB 7.3

24...230 VAC/DC

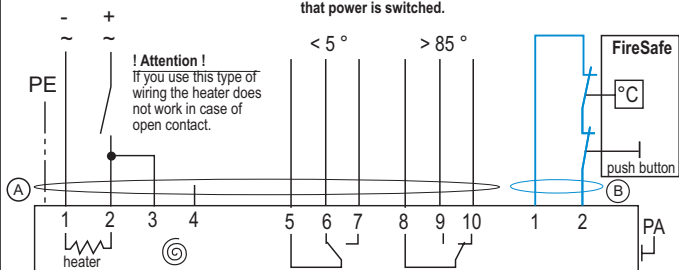

! Attention !
If you use this type of wiring the heater does not work in case of open contact.

Integrated aux. switches max 24V/3A, 230V/0.5A switching at 5° and 85°.


Supply at aux. switches must be the same like supply of the actuator on same fuse in case that power is switched.

EEx-i circuit for passive + potential free push button on site and safety temperature sensor (Type FireSafe accessories)

SB 7.3

On-off/3-pos - spring return + EEx-i circuit SB 7.4

24...230 VAC/DC

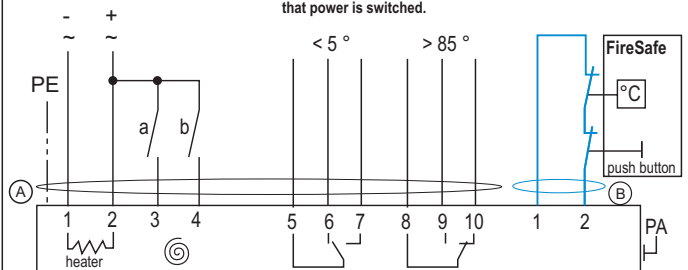

Integrated aux. switches max 24V/3A, 230V/0.5A switching at 5° and 85°.


Supply at aux. switches must be the same like supply of the actuator on same fuse in case that power is switched.

EEx-i circuit for passive + potential free push button on site and safety temperature sensor (Type FireSafe accessories)

SB 7.4

On-off 1-wire - spring return + EEx-d limiter SB 7.5

24...230 VAC/DC

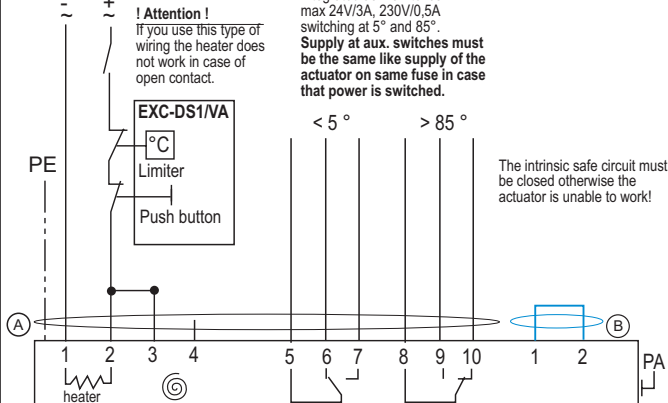

! Attention !
If you use this type of wiring the heater does not work in case of open contact.

Integrated aux. switches max 24V/3A, 230V/0.5A switching at 5° and 85°.

Supply at aux. switches must be the same like supply of the actuator on same fuse in case that power is switched.

The intrinsic safe circuit must be closed otherwise the actuator is unable to work!

Values of the EEx-i circuit

U₀ = 10,6 V
I₀ = 11 mA
P₀ = 30 mW
C_i = 0
L_i = 0

	IIC	IIB	IIA
C ₀	830 nF	3,7 μF	4,5 μF
L ₀	2 mH	5 mH	10 mH







If 40 sec. or 60 sec. mode is selected for motor and/or spring return, the self adjustment of angle of rotation must be started.

Never use actuators without external torque/force min. 10 Nm.



Wiring alternatives for modulating actuators with or without spring return

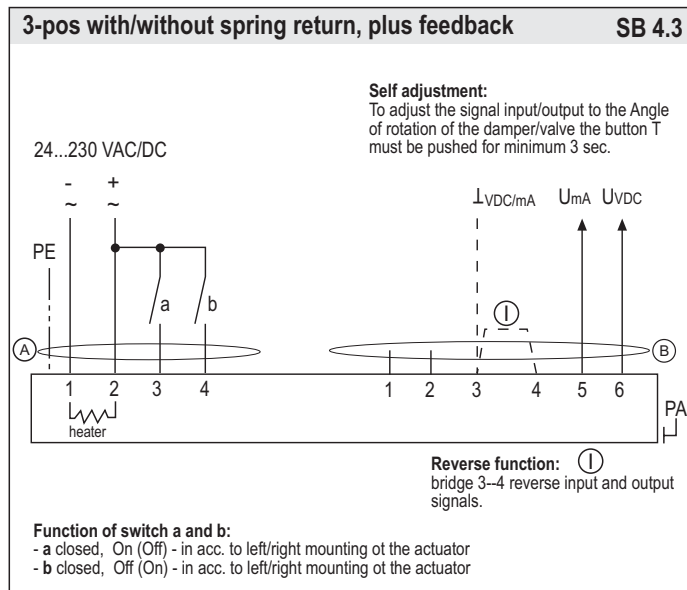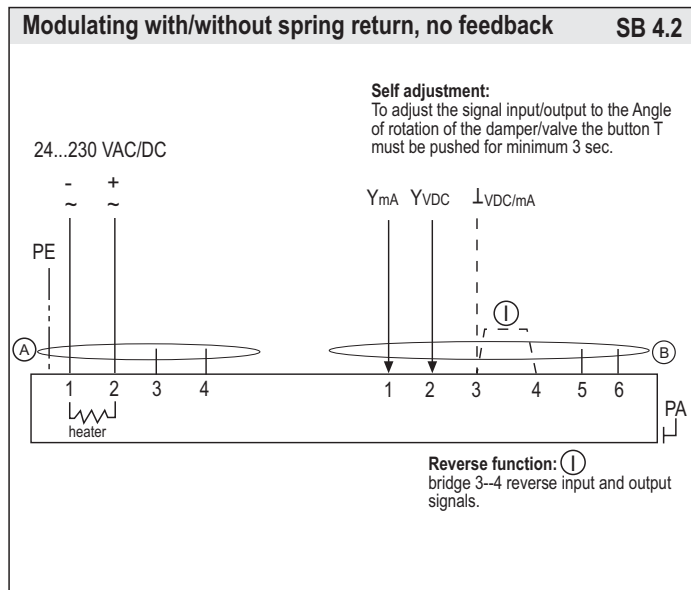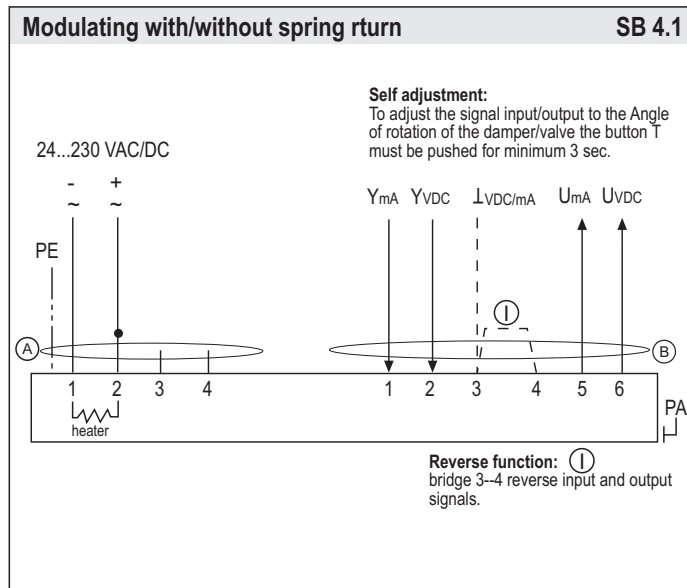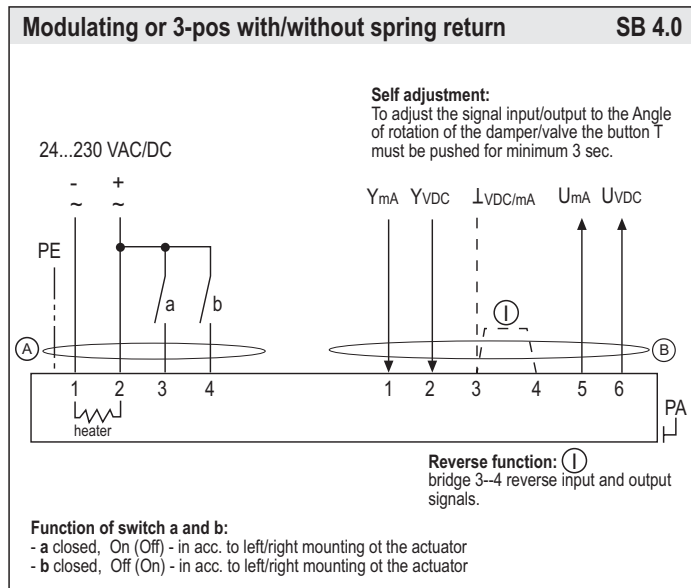ExMax-...-Y.., RedMax-...-Y..


Over temperature, 3-pos-operation, heating by low ambient temperatures

I. Temperature rise

While operating the ExMax actuator following parameters have to be aligned:
At overload resp. temperature rise the actuator will remain functionless until cooling.
During cooling the LED is red.

II. 3-pos operation

ExMax (RedMax) actuators are in the best way suitable for the 3-pos operation. To protect such elements as gears and mounting elements against harmful influences like minimum pulse time, ExMax (RedMax) actuators are protected via internal electronics. The internal electronic permits 20 impulses with $< 0.5 >$ sec. cyclic duration, afterwards at least 1 impulse > 1 sec. must follow. If clocked with more than 20 impulses each < 1 sec. the actuator will adjust into a suspend mode. There after a reset is mandatory and will be achieved by briefly switching of the supply voltage for about 2 sec. The controll unit has to be parameterized in order to be set within the above mentioned duration limits.

III. Use at low ambient temperature below - 20°C

All ExMax (Redmax) actuators are equipped with a regulated integrated heating device designed for employments down to -40°C ambient temperature.

The heater will be supplied automatically by connecting the constant voltage supply on the clamps 1 and 2.

Following parameters are to be considered by ambient temperature $< 10^{\circ}\text{C}$:

1. After mounting the actuator must be immediately electrically connected.
2. The actuator will only be activated after the operating temperature has reached at least -20°C .
3. The adjustment options are only ensured after this heating up period.

IV. Mechanical protection

1. The actuator must be operated with an outside load of at least 10 Nm.
2. After installing the actuator to the damper/armature an automatic alignment has to be accomplished, in order to obtain a "gentle blockade/stop". This function protects the damper/armature by reducing the end positions/blockade speed in order to avoid mechanical overload. The actuator aligns specifically once with $90^{\circ}/90^{\circ}$ onto each position, recognizes the blockade position in order to reduce the motor performance during operation briefly before reaching the end /blockade position.



Error indication

Error/Symptom	Reason	Solution
01 Actuator does not work LED does not lights	<ul style="list-style-type: none"> No power supply attached The actuator is operated beyond ex-prevention ambient temperature specifications and the internal temperature sensor did irreversibly shut down operations 	<ul style="list-style-type: none"> Attache power supply and turn on Because of inadmissible operation the actuator drove out of safety relevant reasons into an irreversible condition and must be exchanged. Accompanying new installation the ambient temperature has to be reduced accordingly
02 Actuator does not work LED lights red	<ul style="list-style-type: none"> The actuator is operated by a too high ambient temperature and the internal temperature sensor responded 	<ul style="list-style-type: none"> Shut off actuator and let temperature decrease, reduce ambient temperature by suitable measures e.g. ventilation or other mounting position of the actuator
03 Actuator does not work LED lights green	<ul style="list-style-type: none"> 3-Pos control signal is wired on both entrances Required torque is greater than actuators torque Control signals are not attached or attached on a wrong conductor Actuator is incorrect mounted and is blocked by an external stop unit Actuator is clocked with more than 20 impulses <0,5 per sec. and therefore adjusted into suspend mode Interchanged supply lines 	<ul style="list-style-type: none"> Readjust/correct circuit Adjust a higher torque at the actuator if possible otherwise exchange for a type with higher torque. Examine rule and adjusting signal in accordance with attached diagram Dismount actuator and testdrive without load for operability. Install actuator accordingly that the power transmissions runs without external blockade or torsion Switch off supply voltage for at least 2 sec. thereby a reset is conducted Readjust controller in order to extend control pulses Wire 1 must be (-, N) and wire 2 (+, L)
04 Actuator does not work LED is red blinking	<ul style="list-style-type: none"> The actuator has been mounted by temperatures of less than -20°C and did not reach is operating temperatur of at least -20°C. 	<ul style="list-style-type: none"> Ensure that a constant voltage supply on conductor 1--2 is existing. Wait until the required operating temperature is achieved by the actuators internal heating system. The actuator will start operating independently
05 Y-drive in the 3-pos mode can not gear into intermediate positions	<ul style="list-style-type: none"> The conversion of constant mode on 3-pos-modus was not set 	<ul style="list-style-type: none"> Recalibrate the actuator in accordance with assembly instructions
06 Actuator sits diagonally on the squared damper shaft	<ul style="list-style-type: none"> The actuators have an angle of rotation of 95° inclusive 5° pre-tention. While assembling the pre-loading was not considered 	<ul style="list-style-type: none"> Dismount actuator of the damper, use the enclosed socket wrench to draw up approx. 5° over the hand operated control device before remounting on the damper shaft. Consider additional information ME-M of the assembly instructions
07 A modulating actuator (Y) works with reduced angle of rotation and already reaches its end positions before 0 V/4 mA, respectively before 10V/20mA.	<ul style="list-style-type: none"> At start up no self adjustment of angle of rotation was accomplished 	<ul style="list-style-type: none"> Accomplish self adjustment of angle of rotation in accordance with assembly instruction
08 LED flashes irregularly and actuator does not work	<ul style="list-style-type: none"> Actuator does not receive sufficient supply voltage Cable to long, voltage drop in the supply line to large 	<ul style="list-style-type: none"> Increase line cross section or increase tension at the transformer/power supply unit Increase line cross section or increase tension



ExMax/RedMax - extra information ME-M



The "ME-M"-data sheet contains additional information for ExMax and RedMax actuators of the size "M", for the optimization and simplification in regard to planning, installation and initial start up.- It shows influences of external factors in reference to the safe operation of the actuators. In particular it represents the installation, as well as different kind of dampers, fire dampers and armatures. Additionally describing different accessories and their mounting to the actuator.



- Dimension, drill template
- Control elements: switch - push button - LED
- Outdoor installation
- Mounting using form-fitting shaft connection (square shaft)
- Mounting on butterfly valves and ball valves
- Mounting on fire dampers
- Mounting ExBox (RedBox), ExSwitch (RedSwitch)

For additional electrical data have a look at "extra information EL"

Dimensions - drill template

Dimension size M

Dimension in mm

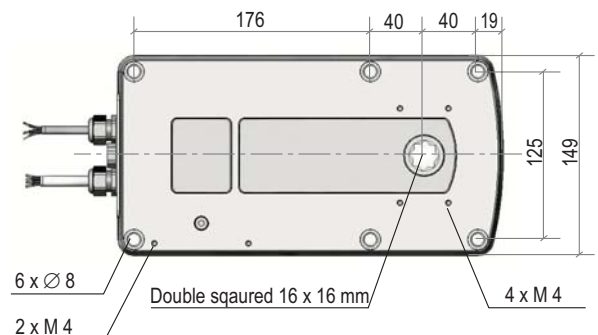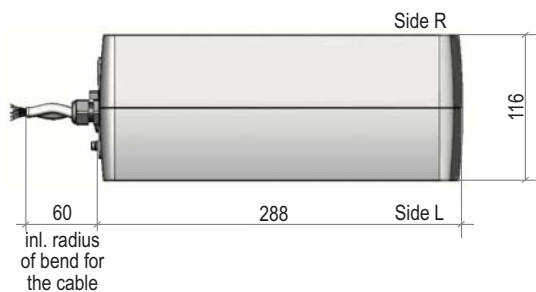


Control elements: switch - push button - LED

Specification

All ExMax and RedMax actuators are equipped with a 10 position switch a push button and a multicolor LED for programming. These control elements are to be found cable-laterally behind the two middle sectioned dummy plugs. For operation these must be removed. The calibration can be achieved despite lining up tension at the actuator. The explosion prevention is not effected. However it has to be of great concern that the dummy plugs must be rescrewed in order to comply with the IP-protection. The operation of the switch and button has to be done by means of a small screwdriver. Force with strong pressure and /or rotation is to be avoided in any case, since otherwise control electronics can be damaged irreparably. By bad visibilities a flashlight (certified within the EX-range) should be used. Attitudes of torque and running time can be achieved also before mounting. The adjustment of angle of rotation can be started only with an outside load and accurate mounting.


Switch - push button - LED for programming, behind dummy plug

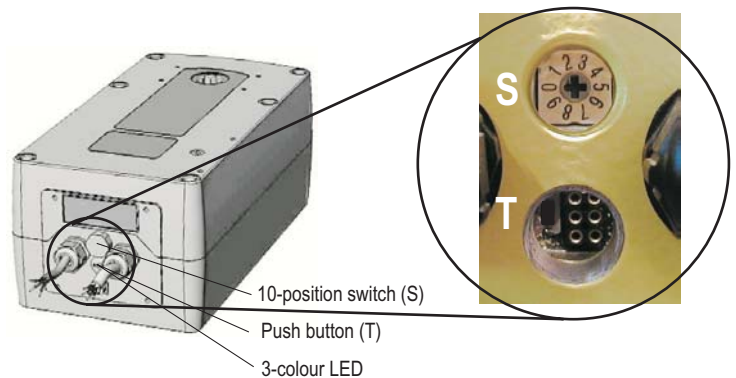

Outdoor installation

Specification

For outdoor installation it has to be certain that the actuator is protected against direct sun exposure (warmth and UV), rain and snow by employing an enclosure roof. Supply voltage is to be applied immediately after mounting in order to assure integrated heating at start. Since explosion proof actuators must have internal safety temperature limiters, these may not be exposed neither at storage nor during operation to a too high temperature. Otherwise the limiters could respond and switch of the actuator irreversibly.

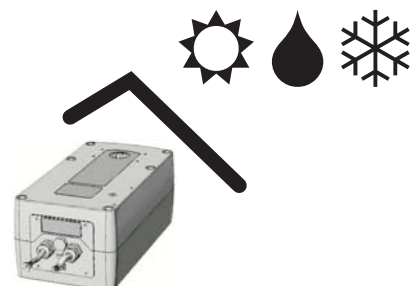





Mounting instruction for ExMax and RedMax actuators size M on air dampers

Specification

ExMax and RedMax actuators size M are equipped with a 16 x 16 mm (double square) shaft connection. The form-fitting shaft connection is the securest connection between damper shaft. The actuator will be connected firmly by means of four screws M 8 x 140 (scope of supply) to the damper.

Form fitting mounting on square damper shaft

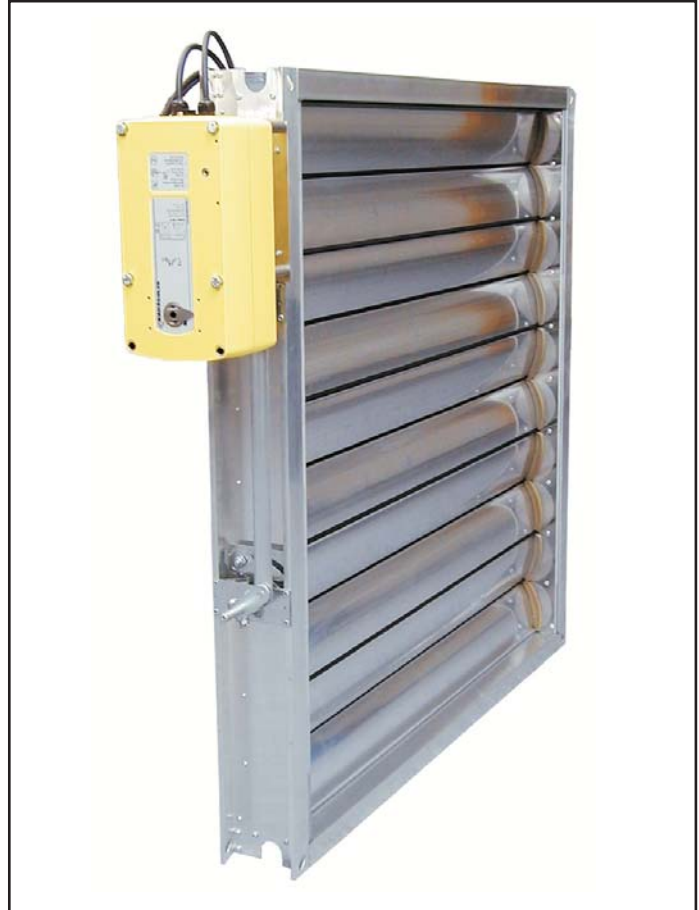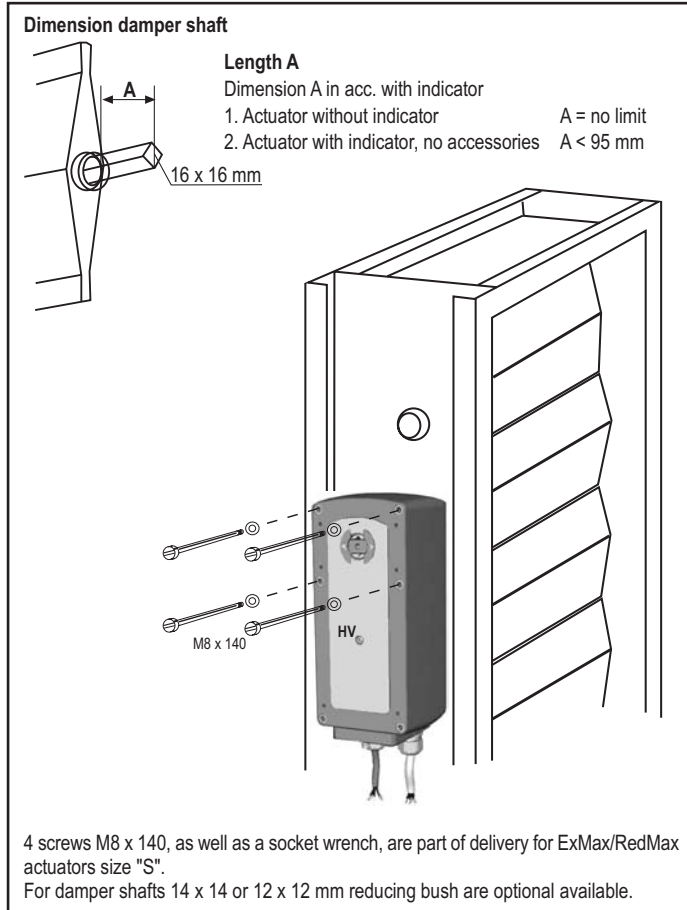

Mounting instructions form-fitting shaft connection

It is to be considered that the actuators have a total angle movement of approx. 95° in order to realize a pre-tension on the damper. Therefore the actuator sits tilted on the damper shaft. In order to prevent this and to assure pre-tension to the damper the driving shaft has to be adjusted mechanically before connecting to the damper shaft. The provided socket wrench serves for the mechanical adjustment over the hand-operated control socket HV. The actuators are axially symmetrically developed. In case of spring return function the safety position must be selected by turning the actuator 180°.

Mounting:

1. Affix tap hole M8 (in accordance with drill template) on the damper or to a mounting bracket.
2. Adjust drive shaft of the actuator with the socket wrench that the drive stands perpendicular to the damper before plugging actuator on to the damper shaft.
3. Plug actuator onto damper shaft and fix diagonally with 2 screws.
4. Remove the socket wrench.
5. Pivot and tighten the remaining screws.


Note: the drive shaft is selflockingly produced and may only be mechanically adjusted either with the provided socket wrench or the optional accessory "HV-M" manual override. External applied force to the shaft can lead to mechanical damage of the actuator.



Mounting instructions for ExMax and RedMax actuators size M on butterfly valve and ball valve

Specification

ExMax and RedMax actuators of the size M are equipped with a 16x16 mm (double square) form-fitting shaft connection. For mounting to butterfly valves or ball valve a special mounting bracket in acc. with DIN EN ISO 5211 is required. Since this standard provides only certain basic conditions there can be substantial geometrical differences between armatures which require a special adaption.

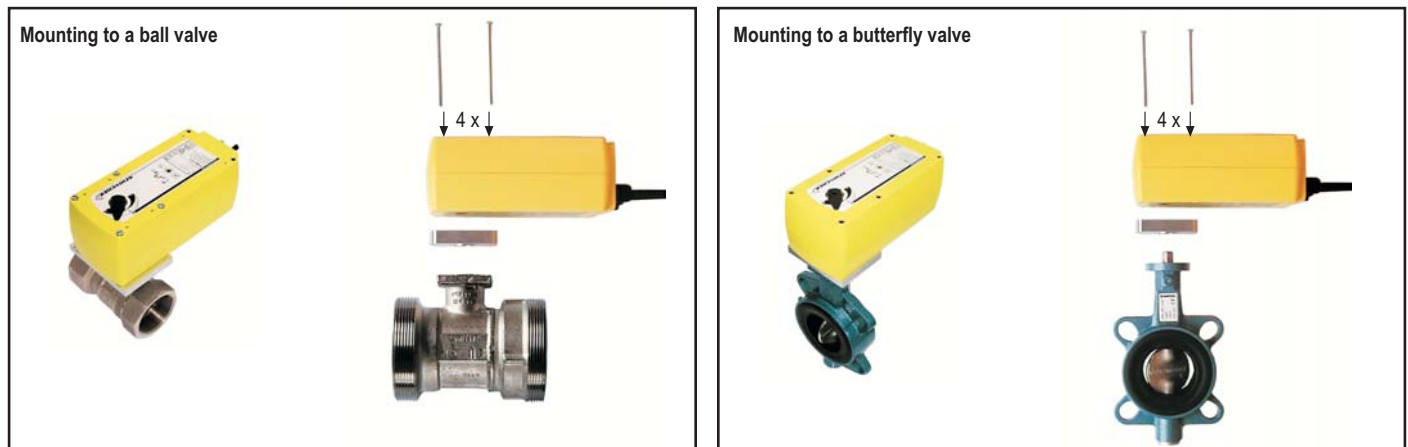

Mounting instructions for ExMax and RedMax actuators Size M on fire dampers

Specification

ExMax and RedMax actuators of the size M are equipped with a 16x16 mm (double square) form-fitting shaft connection. The form-fitting shaft connection is the securest connection between damper shaft and actuator. The actuator is fixed with four screws directly to the fire damper and/or fixed to a mounting bracket. ExMax-...-BF and RedMax-...-BF actuators integrate an intrinsically safe circuit in order to connect a FireSafe sensor which works like a temperature limiter.

Assembly

It is to be considered that the actuators have a total angle of rotation of approx. 95° in order to realize a pre-tension on the damper. Therefore the actuator sits tilted on the damper shaft. In order to prevent this and to assure pre-tension to the damper the driving shaft has to be adjusted mechanically before connecting to the damper shaft. The provided socket wrench serves for the mechanical adjustment over the hand-operated control socket HV. The actuators are axially symmetrically developed. In case of a spring return function the safety position must be selected by turning the actuator 180°.

Mounting:

1. Affix tap hole M8 (in accordance with drill drill template) on the damper or to a mounting bracket.
2. Adjust drive shaft of the actuator with the socket wrench that the drive stands perpendicular to the damper before plugging actuator on to the damper shaft.
3. Plug actuator onto damper shaft and fix diagonally with 2 screws.
4. Remove the socket wrench.
5. Pivot and tighten the remaining screws.
6. Mount temperature limiter type Fire Safe
7. Mount terminal box
8. Connect sensor on actuator

Note: the drive shaft is selflocking produced and may only be mechanically adjusted either with the provided socket wrench or the optional accessory "HV-M" manual override. External applied force to the shaft can lead to mechanical damage of the actuator.




Mounting of terminal boxes type ExBox (RedBox) via mounting bracket MKK-M to the actuator (accessory)


Specification

1. Screw mounting bracket MKK-S to the actuator (A)
then terminal box to the mounting bracket (B) screws

Mounting bracket MKK-M can be mounted every 90°

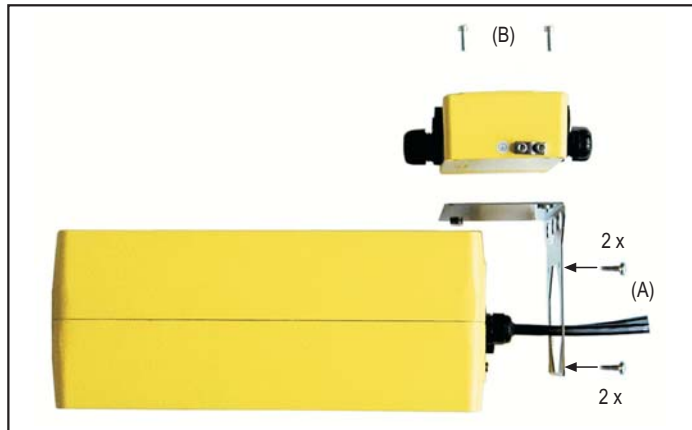

Terminal box mounted above the actuator

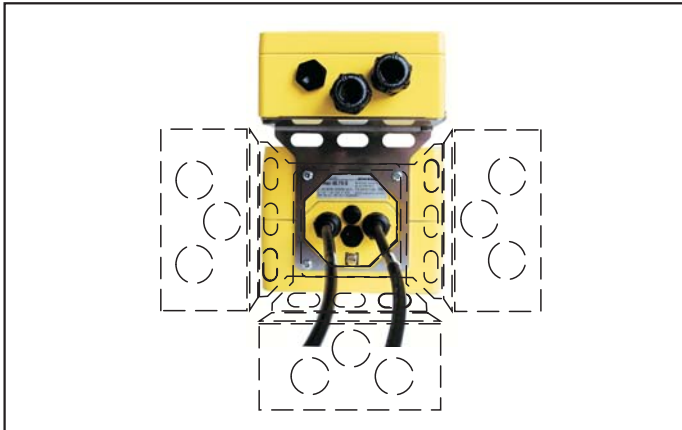

Terminal box mounted beside the actuator




Mounting of ExSwitch (RedSwitch) accessory to the actuator

Specification

1. Put the squared connection part to the actuator, then mount ExSwitch(RedSwitch) and fix it with 4 screws

2. ExMax (RedMax) with mounted ExSwitch (RedSwitch)

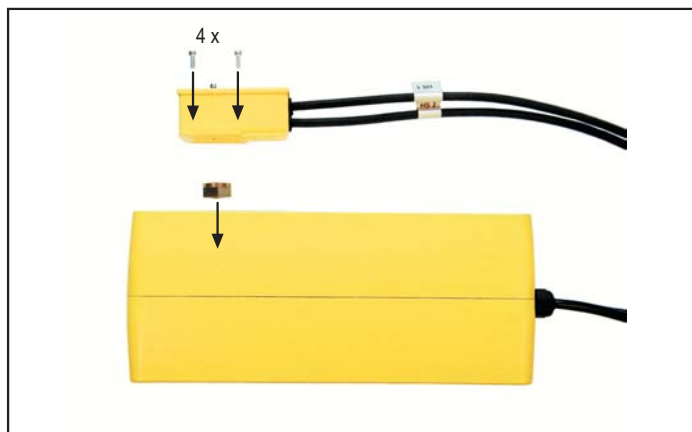

M.MZ-01.01-M-en-Zusatzinfo ME
2006-03-13