

# INSTRUCTION MANUAL

## MP - SERIES:

**MP82710H & MP88710H**

**MP82710 & MP88710**


**MP82810 & MP88810**

**MP82820-R & MP88820-R**

**Mp82830-R**

**Mp82820-T & Mp88820-T**

**Mp82830-T**

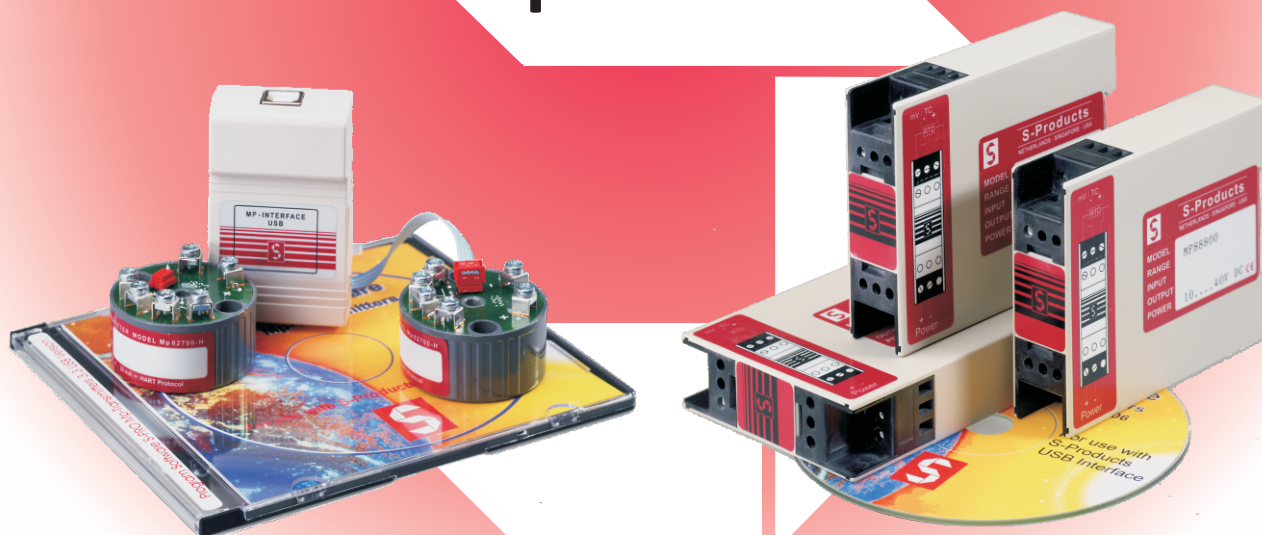

## **CONTENTS**

Type overview  
Specifications  
ATEX  
Safety instructions  
Connection diagram  
Instructions for all Mp type transmitters  
Programming instructions Mp Software  
Dimensions

## **WARRANTY**

Our transmitters have a 5 year warranty.  
Follow usage instruction in this manual.  
In case of malfunction return to your supplier.

## **SPECIFICATIONS**

### **GENERAL INTRODUCTION:**

Our Microprocessor based transmitters are divided in the 2 wire headmount series Mp82000, the rail mount series Mp88000 and the 4 wire Mp87000. NOTE: The 4 wire transmitters are not described in this manual! All models are easily programmed via a personal computer with our software and interface.

Model	Headmount	Railmount	2-wire	4-wire	RTD only	T/C only	All inputs	Isolated	Hart®	ATEX
Mp82820-R	•		•		•					
Mp82830-R	•		•		•					
Mp82820-T	•		•			•				
Mp82830-T	•		•			•				
Mp82810	•		•				•			
Mp82710	•		•				•	•		*
Mp82710-H	•		•				•	•	•	*
Mp88820-R		•	•		•					
Mp88820-T		•	•			•				
Mp88810		•	•				•			
Mp88710		•	•				•	•		*
Mp88710-H		•	•				•	•	•	*
Mp87800		•		•			•			
Mp87700		•		•			•	•		

\* ATEX certification optionally available



**Specifications**

Input

**Mp82810 / Mp88810**RTD: Pt100, Pt250, Pt500, Pt1000  
Ni100, Ni500, Ni1000, Cu10, Cu100  
T/C: K, J, T, E, L, U, R, S, B, C, D, N

Volt &amp; Ohm

RTD: 25 K

T/C: 50 K

4...20 mA / 20...4 mA

On / Off

5...40 VDC

0.001% / V

 $\pm 0.01\%/^{\circ}\text{C}$  or  $\pm 0.02^{\circ}\text{C}/^{\circ}\text{C}$  $\pm 0.01\%/^{\circ}\text{C}$  or  $\pm 0.01^{\circ}\text{C}/^{\circ}\text{C}$  $\pm 0.05\%/\text{year}$  $\pm 0.03^{\circ}\text{C}/^{\circ}\text{C}$ 

0.1 mA

500 Ohm max.

0.005  $^{\circ}\text{C}/\text{Ohm}$ 

10,000 Ohm max.

Upscale / Downscale

Vbat-5V / 20mA

5 sec

2 min

none

 $-40^{\circ}\text{C}...+85^{\circ}\text{C}$  $-40^{\circ}\text{C}...+100^{\circ}\text{C}$ **Mp82710(H) / Mp88710(H)**RTD: Pt100, Pt250, Pt500, Pt1000  
Ni100, Ni500, Ni1000, Cu10, Cu100  
T/C: K, J, T, E, L, U, R, S, B, C, D, N

Volt &amp; Ohm

RTD: 25 K

T/C: 50 K

4...20 mA / 20...4 mA

On / Off

5...40 VDC (H 12...40VDC)

0.003% / V

 $\pm 0.01\%/^{\circ}\text{C}$  or  $\pm 0.02^{\circ}\text{C}/^{\circ}\text{C}$  $\pm 0.01\%/^{\circ}\text{C}$  or  $\pm 0.02^{\circ}\text{C}/^{\circ}\text{C}$  $\pm 0.05\%/\text{year}$  $\pm 0.03^{\circ}\text{C}/^{\circ}\text{C}$ 

0.1 mA

500 Ohm max.

0.005  $^{\circ}\text{C}/\text{Ohm}$ 

10,000 Ohm max.

Upscale / Downscale

Vbat-5V / 20mA (H: Vbat-12V / 20mA)

5 sec

2 min

1500 V AC / 1 min.

 $-40^{\circ}\text{C}...+85^{\circ}\text{C}$  $-40^{\circ}\text{C}...+100^{\circ}\text{C}$ 

Minimum Span

Output

Linearization

Supply \*) Polarity protected

Supply effect

Zero Drift

Span Drift

Long term Drift

Cold Junction Drift

Excitation Current RTD

Sensor Lead Resistance RTD

Sensor Lead Resistance Effect

Sensor Lead Resistance T/C

Open Circuit Detection

Load Capability

Start Up Time

Warm Up Time

Isolation

Ambient Operating Temperature

Storage Temperature

Housing Material Mp82

Zinc Alloy (ZAMAK 5), Epoxy coated

Dimensions

43mm Dia. x 27mm H.

Dimensions With Read-out

43mm Dia. x 36mm H.

Housing Material Mp88

Makrolon

Dimensions

75mm H. X 22.5mm W x 99mm D.

\*) NOTE: For ATEX approved equipment different power requirements may apply!

**Specifications**

Input

**Mp82820-R / Mp82830-R / Mp88820-R**RTD: Pt100, Pt250, Pt500, Pt1000,  
Ni100, Ni500, Ni1000, Ohm

25 K

4...20 mA or 20...4 mA

On / Off

5...40 VDC

500 Ohm max.

Upscale / Downscale

Vbat-5V / 20mA

5 sec

2 min

none

 $-40^{\circ}\text{C}...+85^{\circ}\text{C}$  $-40^{\circ}\text{C}...+100^{\circ}\text{C}$ **Mp82820-T / Mp82830-T / Mp88820-T**

T/C: K,J,T,E,N

50 K

4...20 mA or 20...4 mA

On / Off

On / Off

5...40 VDC

500 Ohm max.

10,000 Ohm max.

Upscale / Downscale

Vbat-5V / 20mA

5 sec

2 min

none

 $-40^{\circ}\text{C}...+85^{\circ}\text{C}$  $-40^{\circ}\text{C}...+100^{\circ}\text{C}$ 

Minimum Span

Output

Linearization

Cold junction compensation

Supply \*) Polarity protected

Sensor Lead Resistance RTD

Sensor Lead Resistance T/C

Open Circuit Detection

Load Capability

Start Up Time

Warm Up Time

Isolation

Ambient Operating Temperature

Storage Temperature

Housing Material Mp82820/30

Makrolon

Dim. Mp82820

43mm Dia. x 23mm H.

Mp82830

43mm Dia. x 21mm H.

Housing Dim. with cover

49mm Dia. x 25mm H.

Housing Material Mp88

Makrolon

Dimensions

75mm H. X 22.5mm W x 99mm D.



## ATEX

### GENERAL:

Some models of the MP series are available in an intrinsically safe version and meet the requirements of the ATEX directive 94/9/EC.

### MARKING:

All ATEX approved units carry the following labels:



S-Products BV  
Nijverheidscentrum 26, NL-2761 JP  
DEKRA 11ATEX0105 X  
CE 0344 Ex II 1 G 2011  
Ex ia IIC T4/T5/T6 Ga See certificate for data  
U<sub>i</sub> ≤ 30V I<sub>i</sub> ≤ 100mA P<sub>i</sub> ≤ 750mW

Year of production  
Serial No. i.e.:

+

C04164

+

General product labels

**S-Products**  
NETHERLANDS - SINGAPORE - USA

<b>MODEL</b>	Mp88710
<b>RANGE</b>	0...1000°C
<b>INPUT</b>	Thermocouple K
<b>OUTPUT</b>	4...20 mA
<b>POWER</b>	10...40 V DC

CE

**2-WIRE TRANSMITTER Mp 82710**

<b>INPUT</b>	Thermocouple K
<b>RANGE</b>	0...1000°C
<b>OUTPUT</b>	4 - 20 mA

CE

### Certificate Number

Mp82710, Mp82710H, Mp88710, Mp88710H, Mp82000D  
DEKRA 11ATEX0105 X

### Parameters for products certified with certificate DEKRA 11ATEX0105 X:

#### Mp82710, Mp82710H, Mp88710, Mp88710H and Mp82000D:

Supply circuit:

U<sub>i</sub> = 30 V DC

I<sub>i</sub> = 100 mA

P<sub>i</sub> = 750 mW

L<sub>i</sub> = 0 mH

C<sub>i</sub> = 0 nF

Input circuit:

U<sub>o</sub> = 6,3 V DC

I<sub>o</sub> = 165 mA

P<sub>o</sub> = 242 mW

L<sub>o</sub> = 1 mH

C<sub>o</sub> = 34,5 µF

CE 0344 Ex II 1 G

Ex ia IIC Ga

T4 (T<sub>amb</sub> -40...+85°C)

T5 (T<sub>amb</sub> -40...+75°C)

T6 (T<sub>amb</sub> -40...+60°C)

CE 0344 = CE marking Notified Body




II = Group

1 G = Category 1, Gas

ia = intrinsic safety

IIC = Hydrogen and Acetylene Gas

T4...T6: Temperature Classification

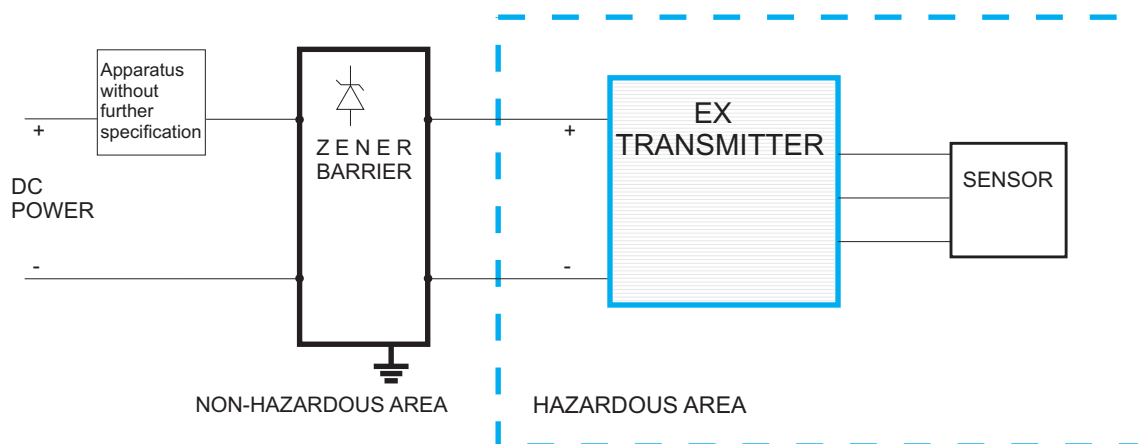

### **NORMATIVE REFERENCE:**

The transmitters Mp82710, Mp82710H, Mp88710, Mp88710H and plug-in display Mp82000D have an EC Type examination certificate issued by DEKRA and have been approved to the following standards:

EN 60079-0 : 2012

EN 60079-11 : 2012

EN 60079-26 : 2007

### **SPECIAL CONDITIONS FOR SAFE USE:**

For electrical data and temperature data see EC-Type examination certificate DEKRA 11ATEX0105 X

### **INSTALLATION REQUIREMENTS:**

- ATEX approved equipment is only to be connected to a Zenerbarrier.

The Temperature Transmitter must be mounted in an enclosure providing a degree of ingress protection of at least IP20 per EN 60529.

This enclosure must be in conformance with Clauses 4.3 and 4.4 of EN 50284, when the Temperature Transmitter is mounted in an area where the use of category 1 G apparatus is required.

This enclosure must be in conformance with Clauses 7.3 and 8.1 of EN 50014, when the Temperature Transmitter is mounted in an area where the use of category 2 G apparatus is required.

The mentioned Clauses describe how to avoid danger of ignition due to electrostatic charges.




- All transmitters Mp82000 and Mp88000 have an ingress protection of IP20.

This requires usage in a dry, clean and well controlled environment.

Mount the Mp82000 transmitter in a (DAN) head as described below..

- It is preferred to use twisted pair, shielded cable to connect the transmitter to its power supply in order to obtain the best immunity to Electromagnetic signals. On the power supply side connect the shield to the power supply's earthing point, on the transmitter side connect the shield to the grounded head somewhere close to the transmitter.

Make sure the transmitter is firmly connected to the head.

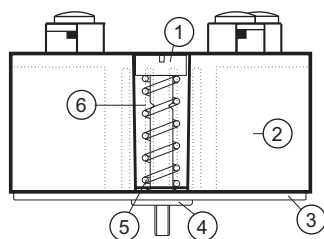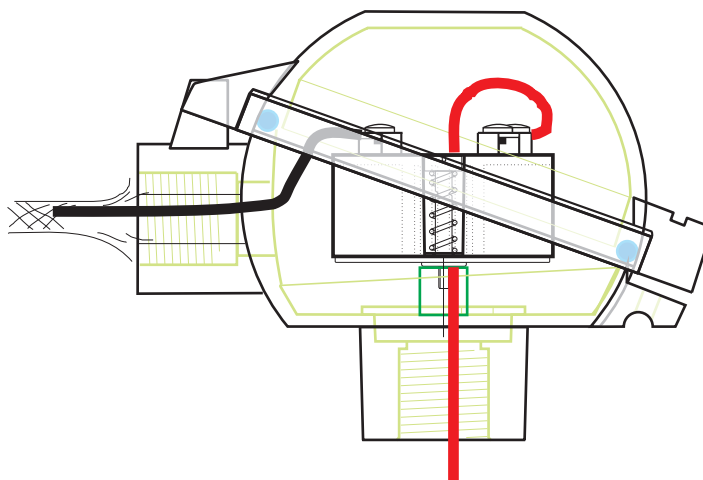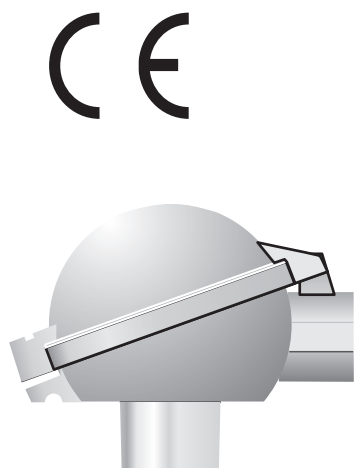


#### **MOUNTING in CONNECTION HEAD**

1. Screw M4
2. Transmitter
3. Measuring insert plate
4. Ferrule
5. Spring
6. Notch




## CONNECTIONS

Mp82710(H) / Mp82810

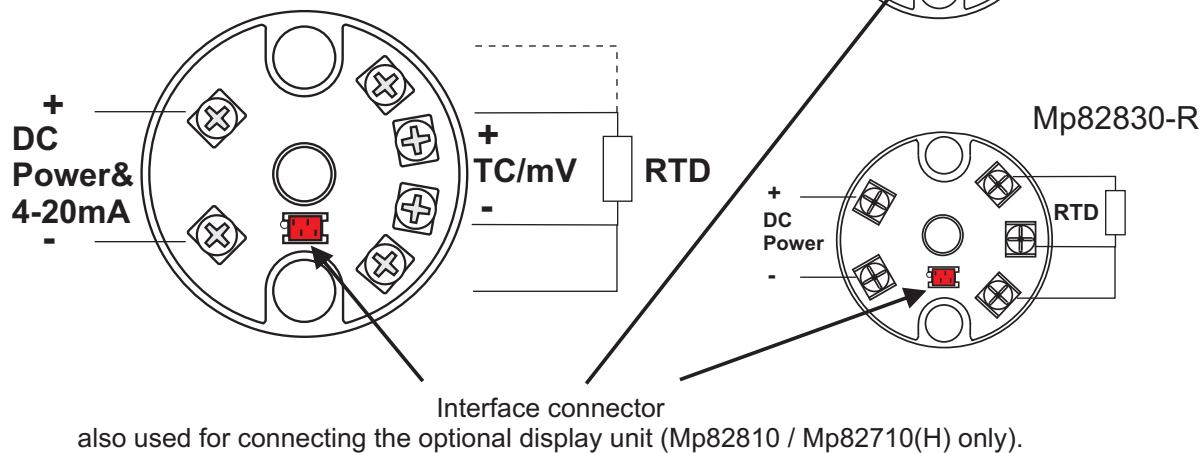

Mp88820-R / Mp88820-T / Mp88810 / Mp88710(H)

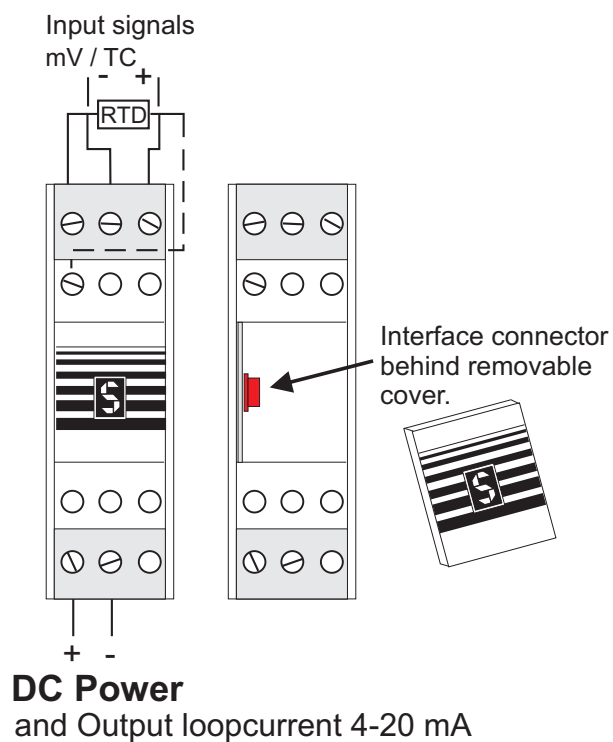

### **General Instructions for the user**

(not required for factory calibrated transmitters)

1. Insert the CD-ROM into your computer.

The Software will start automatically. (Or you may run MpUser\_Setup\_V44.exe)

Just follow the on-screen instructions.

Required is at least Windows 98 or NT and 1MB free space.

2. Connect the interface to the USB port of your computer.

Attach the interface to the transmitter.


Start the installed S-PRO Mp - software by clicking the "S"-icon.

First click Upload to read the settings from your transmitter.

Select the required parameters and download these into the transmitter.

3. After programming you may connect the transmitter as shown in the connections drawing.

4. An optional display unit may be connected to the interface connector (Mp82 and Mp87 series), after connecting power and a sensor.

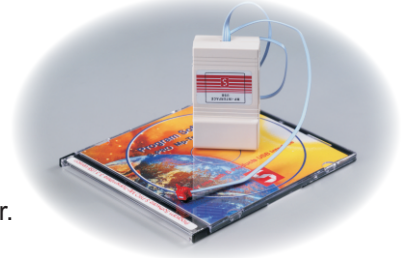

### **HART® protocol transmitters**

Selecting sensor and range can be done exactly the same as described before for all our transmitters with the MP software.

In order to use HART protocol you need a HART compatible interface and software or a handheld terminal.

Connect with a resistor in the loop as required by HART.

The transmitters know 14 universal commands and 5 common-practice commands:

- 0 Read unique identifier (ID)
- 1 Read primary variable
- 2 Read current and % of range
- 3 Read current and 4 (2) dynamic var
- 6 Write polling address
- 11 Read unique ID associated with tag
- 12 Read message
- 13 Read tag, descriptor, date
- 14 Read PV sensor information
- 15 Read output information
- 16 Read final assembly number
- 17 Write message
- 18 Write tag, descriptor, date
- 19 Write final assembly number

- 34 Write damping value
- 35 Write range values
- 40 Enter/Exit fixed current mode
- 49 Write PV sensor
- 59 Write # of response preambles

Note:

It is not possible to change °C into °F or vice versa with a HART command.

Use the S-Pro Mp software to program the transmitter






## S-PRO MpUser Software

### General

This program uses the basic Windows® features like Save, Print, and Exit.

We refer to the Windows Help Manual for file handling.

Without a mouse you can reach the menu-items pressing both ALT and the underlined key. You can jump between the settings with TAB.

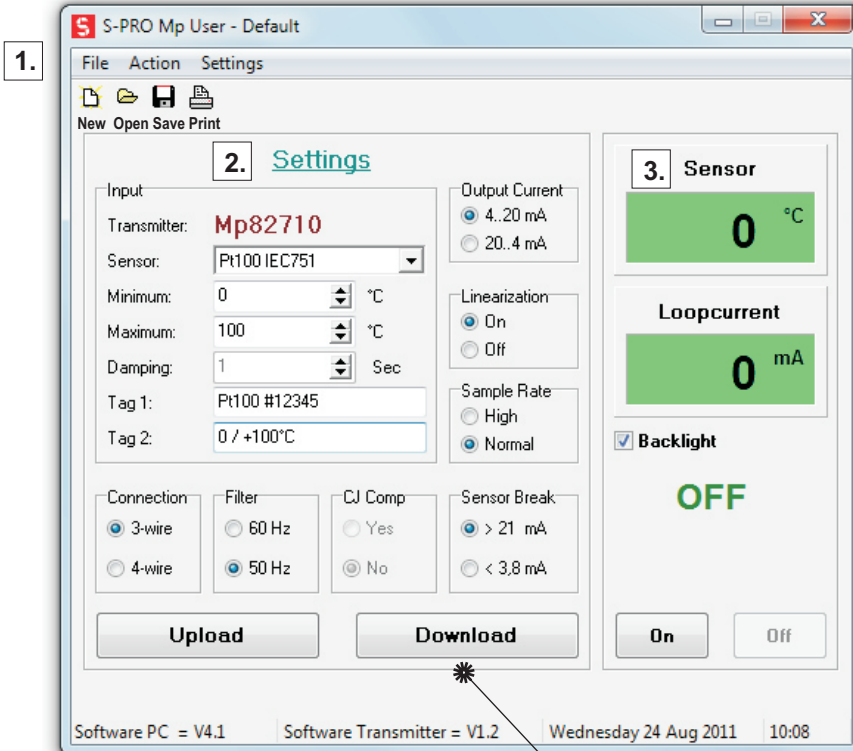

Note that you will only get a Sensor / Loopcurrent readout on screen if the transmitter is connected to a sensor.

### 3. On-Screen Readout

In the Sensor display you'll see the actual input value provided the programmed sensor is connected. Loopcurrent is a calculated value.

Click On to start and Off to stop the on-screen display. You must turn the on-screen display off before changing settings.

### 1. File - Action - Settings

It is possible to save your settings for later use, to open a previous configuration or to print the present configuration. Either click on File or on one of the icons. The large Upload and Download buttons are also located under Action.

With a transmitter connected use **Upload** to find out the settings of your transmitter. After you made the required selections use **Download** to program the transmitter.

Settings is an important menu item. Here you can select °C or °F and the **COM** port. You can check which COM-port has been assigned to the interface in your Windows Hardware Configuration Screen.

### 2. Settings

**NOTE:** Make sure to switch the on-screen readout Off, otherwise you can't alter the settings!

**Transmitter :** Use Upload to automatically detect transmitter model connected (connect transmitter first).

**Sensor :** You may select the input sensor from a list. The choice is limited by the transmitter type. Thermocouple alloys are mentioned.

**Minimum and Maximum :** Input values for output current start and end. Default are the range minimum and maximum of the selected sensor.

**Tag 1 and Tag 2 :** Any comment you'd like to add. (max. 16 characters)

**Connection :** The number of lead wires on your RTD sensor (i.e. Pt100).

**Filter :** Set to 50 Hz for Europe and 60 Hz for USA.

**CJ Comp :** Cold Junction Compensation for Thermocouples.

**Sensor Break :** Fixation of the loopcurrent on sensor malfunction.

**Output Current :** Choose min...max = 4...20 mA or 20...4 mA (Mp87000: The 0..1V/10V/0..20mA is automatic)

**Linearization :** Select On to linearize the input curve, or Off if you require the output curve to be the same as the input.

**Sample Rate :** Select High for high sample rate, or Normal for standard sample rate.


**Upload :** Read the configuration from the transmitter.  
**Download :** Write your settings to the transmitter.






## DIMENSIONS


Mp82710(H)  
Mp82810

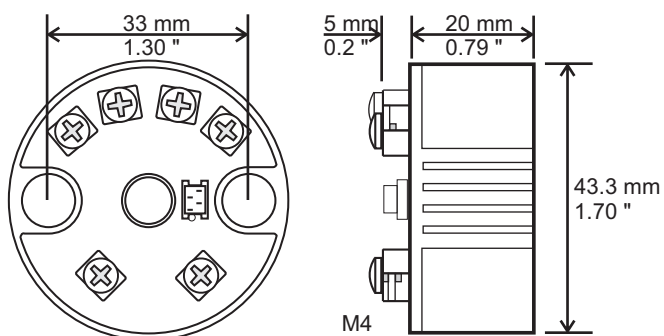


Mp82710(H) with display  
Mp82810 with display

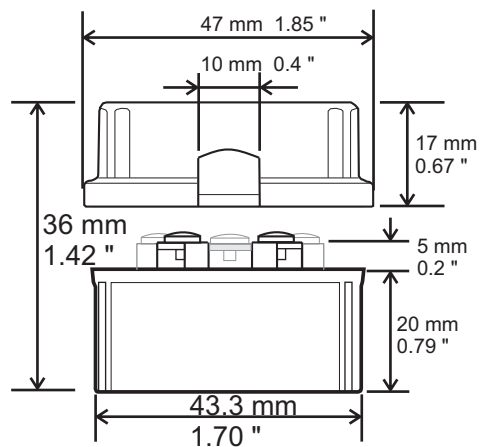

Mp82820-R

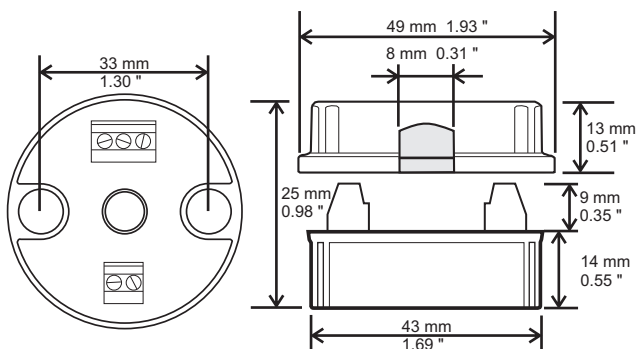

Mp82830-R

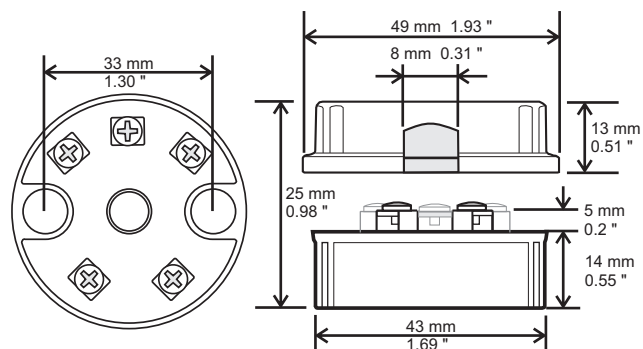

Mp88710(H)  
Mp88810  
Mp88820-R  
Mp88820-T

