
IEG-TC1 IEG-TC2

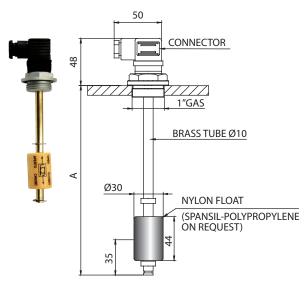

ELECTROMAGNETIC LEVEL INDICATORS WITH ONE OR TWO CONTACTS AND 1" GAS CONNECTION

IEG-TCMM

USE:

Made to ensure, with maximum safety, the minimum or maximum level of liquids in tanks.

Suitable for tanks containing liquids compatible with the brass tube, such as hydraulic and lubricant oils (with density not higher than 80°E), petroleum, etc.


OPERATION:

When the float of the indicator encounters the Reed switch at the pre-established point, the contact activated by the magnet housed in the float opens or closes, thus obtaining the possibility of sending a luminous or acoustic signal or activating or disconnecting any electrical equipment connected to it.

FITTING:

The indicator must be fitted in the vertical position, and the float must be at least 35mm from ferrous surfaces (walls, tanks, etc.).


CONNECTION: Connector CE DIN 43650 IP65 PG.9



NB:

The IEG - TCMM level indicator with SPDT (exchange) separate contacts or with one common, requires an aluminium connection head containing an adequate number of terminals for the use (5 or 6).


		CONNECTION	ELECTRICAL CONTACTS	ELECTRICAL CHARACTERISTICS						TEMPERATURE	
MODEL	MATERIAL			POWER COMMUTABLE IN D.C.	POWER COMMUTABLE IN A.C.	CURRENT STRENGTH IN A.C.	COMMUTABLE VOLTAGE	PROTECTION	RANGE	TEFLON WIRES	MAX. PRESSU
IEG - TC1	BRASS	1" GAS MALE		- 80 W	80 V.A.	1,3 A	250 VDC 250 VAC		ပ	+120 °C	10 Bar
IEG - TCMM			SPST					IP 65	+80		
IEG - TC2			<u>3</u> <u>2</u> 60 W	60 V.A.	1 A	230 VDC 230 VAC]	-20	-20	` 	

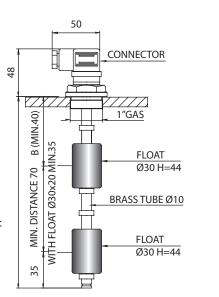

IEG-N1F + T

ELECTROMAGNETIC LEVEL INDICATORS WITH ELECTRIC CONTACT AND THERMOSTAT

IEG-TC1 + T

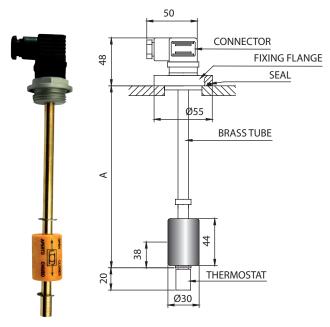

USE:

Made to ensure the minimum or maximum level in tanks and hydraulic power packs and activation of the thermostat when, for operating reasons, the temperature must not exceed values harmful to correct operation. **LEVEL INDICATOR OPERATION:**

When the float of the indicator encounters the Reed switch at the pre-established point, the contact activated by the magnet housed in the float opens or closes, thus obtaining the possibility of sending a luminous or acoustic signal or activating or disconnecting any electrical equipment connected to it.

THERMOSTAT OPERATION:

When the temperature of the liquid in the tank reaches the thermostat setting value, the thermostat closes or opens for switching on a lamp or interrupting operation of the machine connected to it, or activating any cooling equipment, thus preventing the risk of overheating and permanent damage.

FITTING:


The indicator must be fitted in the vertical position.

The float must be at least 35mm from ferrous surfaces (tank walls, etc.).

IMPORTANT:

To invert the level signal from N.C. to N.O. and vice versa, just remove the bottom stop and turn the float upside down.

1=THERMOSTAT
2= ELECTRIC LEVEL INDICATOR
3= COMMON
4= EARTH
Connection:
Connector CE
DIN 43650



THERMOSTAT ELECTRICAL CHARACTERISTICS						
VOLTAGE	250 V. COMMUTABLE					
FREQUENCY	50 Hz					
LOAD VALUES	4,0 A. cos φ = 0,6 (I M OT)					
LOAD TALGED	6,3 A. cos φ = 1,0 (I N)					
MAX. LOAD	10 A. cos φ = 1					
COMMUTATING	50°C - 60°C - 70°C - 80°C					
TEMPERATURE						
CONTACTS	N.CH. = NORMALLY CLOSED					
	N.A. = NORMALLY OPEN					
TOLERANCES	± 5°C					

Γ		NODEL MATERIAL	CONNECTION		ELECTRICAL CHARACTERISTICS						TEMPERATURE	
	MODEL		M4	ELECTRICAL CONTACTS	POWER COMMUTABLE IN D.C.	POWER COMMUTABLE IN A.C.	CURRENT STRENGTH IN A.C.	COMMUTABLE VOLTAGE	PROTECTION	RANGE	TEFLON WIRES	MAX PRESSI
	IEG - N1F + T	BRASS	60 000 042	2 3	80 W	80 V.A.	1,3 A	250 VDC 250 VAC	IP 65	20 +80 °C	20 +120 °C	10 Bar
	IEG - TC1 + T		1" GAS								9	